



Note: The Printed Circuit-board edge connector sockets [MJ (for Master Jack?)] are indicated in this view. The specific boards with which each MJ is associated is indicated by number. Unless otherwise indicated, the PB number applies to all models of the Mark II, B, and E series. The Mark I series usually uses PB numbers lower than 1099.

NOTE: For Transmitter operation, [in those action is accessible For detail

Bot

Revised June 1975 ML *ML 060375*

REAR